
ASSEMBLY AND INSTALLATION INSTRUCTIONS

T0356

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements. 2. READ AND SAVE THESE INSTRUCTIONS.

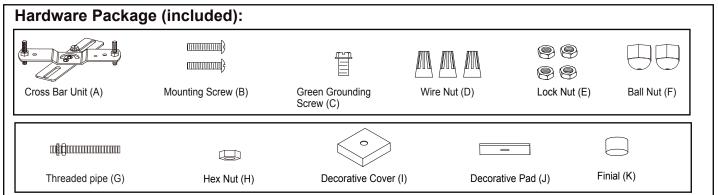

Installation Steps

Turn off the power at fuse or circuit box.

- 1. Attach the cross bar unit to the outlet box using two mounting screws. Adjust the length of the headless screws if necessary.
- Pull out the source wires from the outlet box. Make wire connections using wire nuts as follows:

 ---Connect the hot wire (usually black insulation) from the fixture to the black wire from the power source.


---Connect the neutral wire (usually white insulation) from the fixture to the white wire from the power source.

---Attach the fixture grounding wire (usually green insulation or bare wire) to the cross bar unit with the preinstalled green grounding screw, and then connect it to the house grounding wire with the wire nut.

Carefully tuck the wires back into the outlet box.

- 3. Attach the ceiling pan to the cross bar unit by inserting the two headless screws, and then secure it with two ball nuts.
- 4. Install three bulbs (not included), check relamping label at socket area or packaging for maximum allowed wattage.
- 5. Screw the threaded pipe into the coupling, and then secure the preinstalled washer and hex nut.

NOTE: The depth of threaded pipe may need to be adjusted to properly fit metal frame, decorative cover, decorative pad and finial.

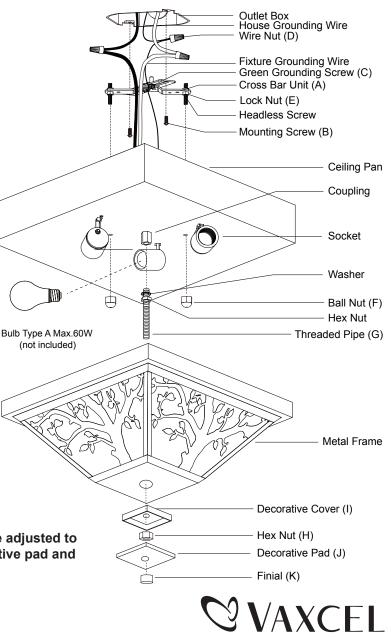



171023

- 6. Attach the metal frame to the ceiling pan by inserting the threaded pipe, and then slip up the decorative cover pad with the open side facing downward through the threaded pipe, and then secure them with the hex nut.
- 7. Slip up the decorative pad through the threaded pipe, and then secure it with the finial. Note: Make sure that the decorative pad and the metal frame is side to side during installing decorative pad.

Turn on the power at fuse or circuit box.

The following parts are available for re-order if damaged or missing.

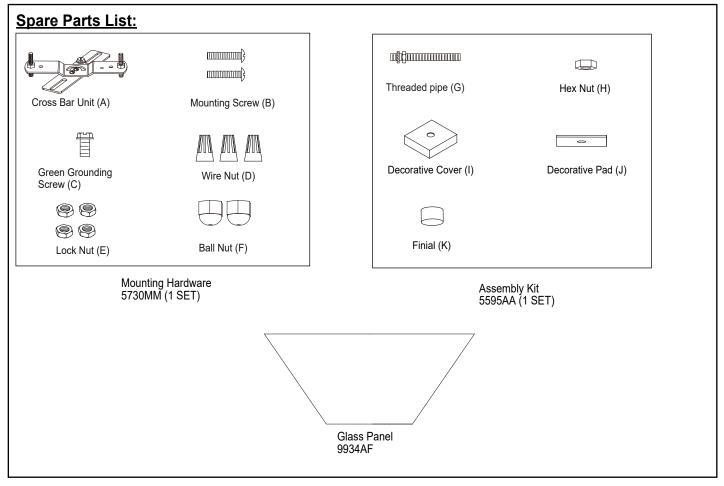

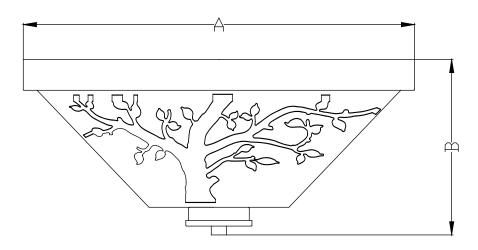

A: 14" B: 6-1/4"

